

A professional photograph of a man in a factory or industrial setting. He has dark, wavy hair and a beard. He is wearing safety glasses with yellow frames and lenses, a white collared shirt, and a grey zip-up work jacket with yellow accents and a uvex logo on the chest. He is also wearing grey work gloves. The background shows industrial equipment, pipes, and bright overhead lights.

Safety Eyewear


# Manufacturing and technological expertise

*uvex industrial health and safety – the systems provider with world class manufacturing expertise*

80% of our entire net output is produced in our own manufacturing plants, where we combine the very latest technology with the power of innovation and years of experience. Our quality management systems meet the very highest requirements and all plants are certified in accordance with the ISO 9001:2008 quality management standard.

At its main location in the Bavarian city of Fuerth, the uvex safety group has brought together its expertise in safety eyewear, wide-vision goggles, prescription safety spectacles and laser protection goggles to create a unique centre of expertise for protective eyewear.



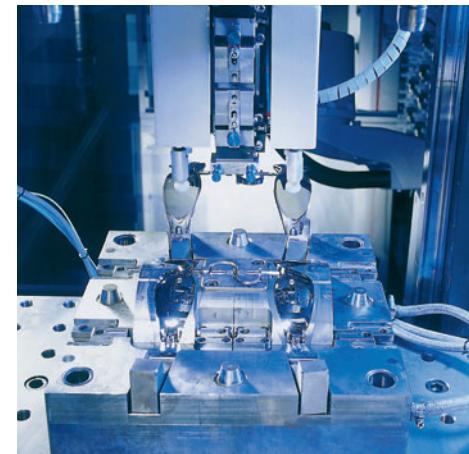

The uvex product development team works to put ideas into practice and bring projects to life. All uvex products exceed the requirements of the relevant standards. The mechanical and optical properties of our products are subject to continuous testing in our laboratory and our unique, high performance coating systems are developed and produced in-house.

The uvex safety group's quality standards are exemplary a key part of which is our environmental mission statement, which is binding at all our sites, and forms a core part of company policy.

uvex i-performance

# Next Level Equipment

Newly defining performance

uvex  
i-3 AR

The uvex i-performance product system supports the natural movement of the human body, reducing pressure and stress while also maximising comfort.

Constant product development is carried out on the basis of the latest physiological research and technology, thereby ensuring maximum performance with quantifiable product benefits.




# uvex i-3 AR

## Ensuring the eyes are also wide awake.


uvex i-3 AR are innovative safety spectacles with anti-reflective coating on both sides of the lenses. The high light conductivity ensures perfect vision at all times, for example when reading test parameters or working with highly reflective components. Strain on the eyes is reduced and the wearer will find it easier to focus.

These spectacles are particularly suitable for workplaces with a combination of artificial and natural light. In combination with exceptional wearer properties, this means the uvex i-3 AR has all the prerequisites of safety spectacles that people enjoy wearing. They always allow a clear view of what matters.

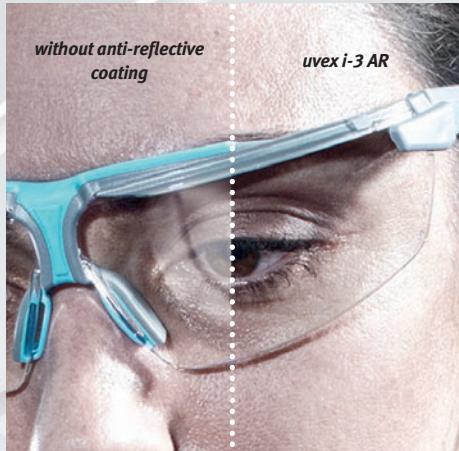

### Coating

The anti-reflective coating on both sides provides 100% protection against UV 400 and a transmission factor of more than 96.5%, which means distracting reflections are effectively prevented.

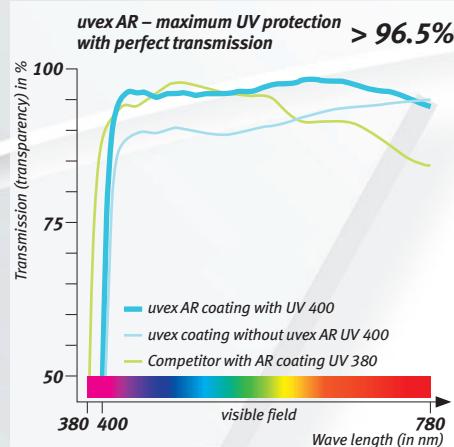

### Transmission (transparency)

With the anti-reflective coating, the uvex i-3 AR reaches a higher transmission factor than safety spectacles with regular coating technology – ensuring perfect vision without reflections.



### Nose loops

The extremely soft adjustable Softflex nose loops ensure the spectacles do not slip at any point and sit comfortably on the nose.



### Side arm inclination

The variable side arm inclination allows flexible adjustment to individual requirements and optimum coverage of the eyes. The Softflex ear pieces ensure a secure and pressure-free fit.

# Technology

## Properties · Lens tinting


**UV 400**

All polycarbonate lenses offer 100% UV protection up to 400 nm, regardless of lens tint.


**Lightweight**

Ultra light for permanent wearer comfort. So light that you can wear them all day long.


**The highest optical quality in accordance with EN 166**

Freedom from distortion prevents the symptoms of fatigue. Ideal for constant use in work which place particularly high demands on the eyes.


**High Impact Protection**

Extremely impact-resistant polycarbonate for maximum protection against all mechanical risks in line with EN 166.


**OEM**

Customised uvex safety eyewear – Personal protective equipment with your company logo. For more information, please contact your sales advisor.


**Suitable for use with prescription glasses**

Design shaping ensures there are no pressure points.


**Individual side-arm inclination**

Adjustable side-arm inclination guarantees that uvex safety eyewear can adapt to fit any head shape, ensuring higher wearer acceptance.


**Individual length adjustment**

Multiple position, side arm length adjustment of uvex spectacles ensures an individual, comfortable fit.


**uvex quattroflex**

Four pads around the sensitive ear area ensure a comfortable, pressure-free fit.


**uvex duo-flex**

The unique, patented soft pads on the ear pieces snugly fit any head shape, preventing pressure points behind the ears.

| Tinting                 |  | Protection | Marking                    | Transmission      | Standard                   | Features and areas of application   |  |
|-------------------------|--|------------|----------------------------|-------------------|----------------------------|---|--|
| AR<br>(anti-reflective) |  | UV         | 2(C)-1.2                   | > 96.5 %          | EN 166<br>EN 170           | – Working environments with strong or overhead light, glare or mixed lighting<br>– Reduces reflections          |  |
| clear                   |  | UV         | 2(C)-1.2                   | approx. 91 %      | EN 166<br>EN 170           | – Working environments with low or no dazzling glare  |  |
| amber                   |  | UV         | 2(C)-1.2                   | approx. 85 %      | EN 166<br>EN 170           | – Poorly lit working conditions (improved contrast)   |  |
| light blue              |  | UV         | 2(C)-1.2                   | approx. 85 %      | EN 166<br>EN 170           | – Changing light conditions<br>– Extremely brightly lit working environments                                    |  |
| light green             |  | UV         | 2-1.7                      | approx. 51 %      | EN 166<br>EN 170           | – Laboratories with artificial UV light   |  |
| variomatic              |  | UV         | 5-1.1<2                    | 15 – 84 %         | EN 166<br>EN 172           | – Changing light conditions (bright/dark)   |  |
| silverlight mirror      |  | UV         | 5-1.7                      | approx. 48 – 56 % | EN 166<br>EN 172           | – Changing light conditions (bright/dark)   |  |
| grey                    |  | UV         | 5-2.5                      | approx. 23 %      | EN 166<br>EN 172           | – Sun glare filters (glare protection)<br>– Full signal colour recognition                                      |  |
| brown                   |  | UV         | 5-2.5                      | approx. 20 %      | EN 166<br>EN 172           | – Sun glare filters (glare protection)<br>– Full signal colour recognition<br>– Improved contrast               |  |
| Tinting                 |  | Protection | Welding shade              | Transmission      | Standard                   | Features and areas of application   |  |
| welding filter<br>green |  | UV + IR    | 1.7 / 2 / 3 /<br>4 / 5 / 6 | 43 – 1 %          | EN 166<br>EN 169           | – Protection from IR and UV radiation<br>– Minimised damage from welding sparks                                 |  |
| welding filter<br>grey  |  | UV + IR    | 1.7 / 3 / 5 / 6            | 43 – 1 %          | EN 166<br>EN 169<br>EN 172 | – Protection from IR and UV radiation<br>– Minimised damage from welding sparks<br>– Perfect colour recognition | – Can be used as sunshields or as a welding safety goggle<br>– Permanent anti-fogging properties on the inside and extreme scratch-resistance on the outside |

The following lens materials are used for uvex safety glasses:


PC = polycarbonate  
G = glass

CA = cellulose acetat  
HG = hardened glass


VG = laminated glass (clear) and  
laminated glass for welding filters

# Labelling and norms

## Marking on frame

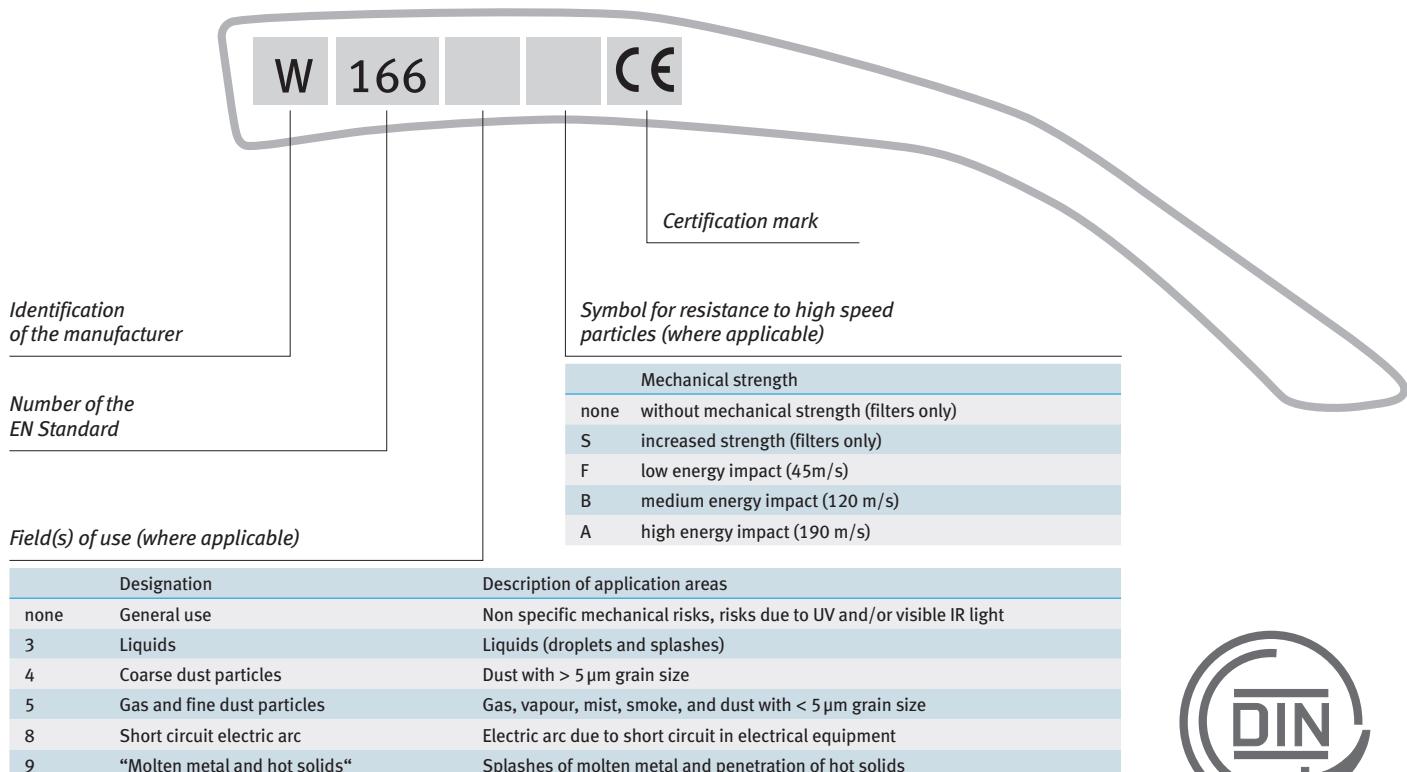

## Marking on lens

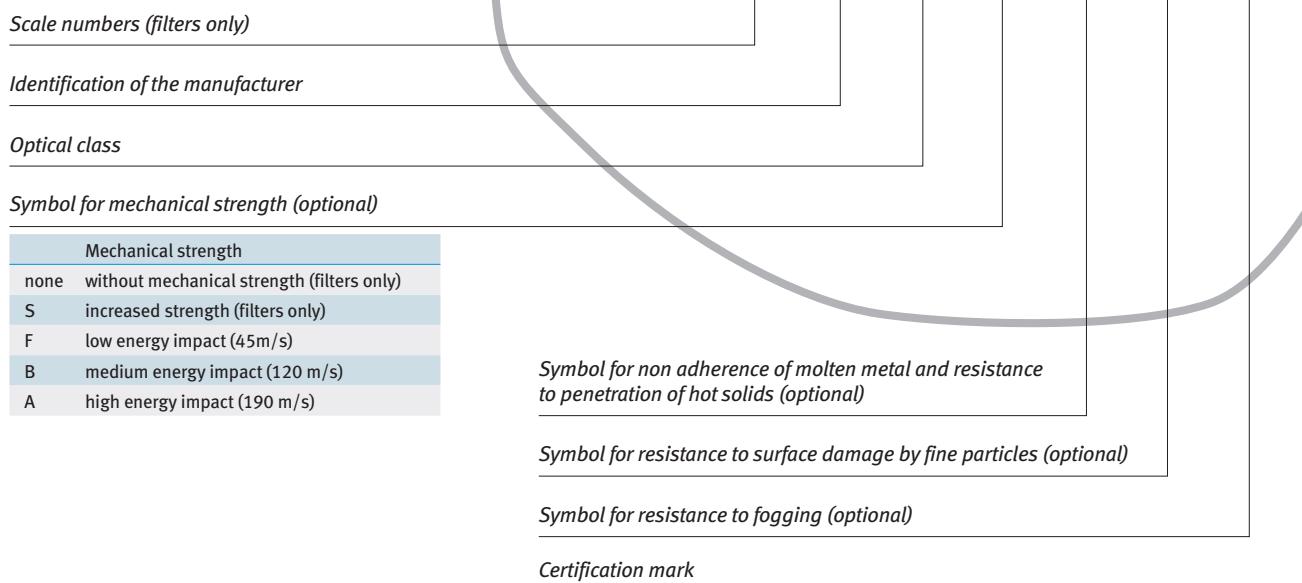

# Coating technology

*uvex optidur · uvex infradur*

*uvex optidur coated lenses have the same properties on both sides.*



Lenses coated with **uvex optidur NCH** are extremely scratch-resistant and are also highly resistant to chemicals. The lacquer system features nanotechnology, which considerably increases the non-stick properties of the lens making them easier to clean. As a result, water-based and oily marks can be removed effortlessly.



Lenses coated with **uvex optidur 4C PLUS** are non-fogging, scratch-resistant on both sides and anti-static. The anti-fog coating is permanent and won't wash off.



Lenses coated with **uvex variomatic** are light reactive ensuring optimum vision by automatically darkening within 10 seconds and returning to their original tint within 30 seconds. The lenses also have glare protection. These lenses are particularly suitable for working conditions with frequent alternation between inside and outside, light and dark.

*uvex infradur coated lenses provide optimum protection against infrared radiation.*



**uvex infradur PLUS** welding lenses protect against ultraviolet and infra-red radiation as well as glare. The coating minimises welding spark damage.



Lenses coated with **uvex infradur AF** have grey welding filters that protect against UV and IR radiation as well as glare. They offer perfect colour recognition in accordance with EN 172. The coating guarantees permanent anti-fogging properties on the inside, extreme scratch-resistance on the outside and minimises welding spark damage.

# Coating technology

*uvex supravision*

*uvex supravision coated lenses have different features on both sides – permanent anti-fogging properties inside, extreme scratch-resistance outside.*



Lenses coated with **uvex supravision HC-AF** are anti-fog on the inside and extremely scratch resistant on the outside, as well as resistant to chemicals. The nano clean effect ensures that the lenses are very easy to clean and less susceptible to dirt.




Lenses coated with **uvex supravision performance** are scratch resistant on the outside and the anti-fogging properties on the inside are twice the strength of uvex supravision HC-AF coated lenses. The anti-fog coating is permanent and therefore, won't wash off. The nano clean effect on the outside ensures that the lenses are very easy to clean and less susceptible to dirt. This coating is perfect for sudden exposure to condensation and where frequent cleaning of the lenses is required.



Lenses coated with **uvex supravision extreme** are scratch resistant on the outside and have permanent anti-fog on the inside. The lenses cannot steam up because the coating never reaches a point of saturation. Particularly suitable for workplace environments with high air humidity and long-lasting exposure to condensation.



## Anti-fog times

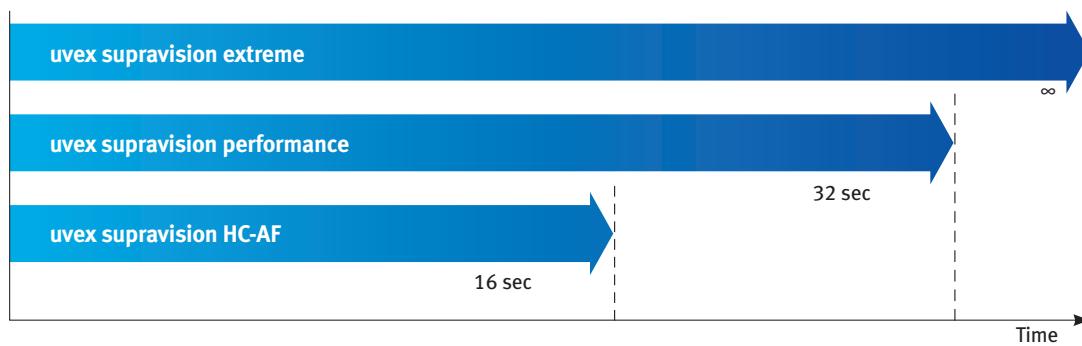

# uvex i-3

*Taking the wearer experience to a new level*

**The wearer should not conform to the product –  
the product should conform to the wearer!**

uvex understands that each safety spectacle wearer is unique and this is central to our design philosophy of developing products which can be adapted to individual needs.

The uvex i-3 with its innovative features, is the perfect example of an all wearer spectacle combining functionality and comfort with a high level of protection.



# Safety Spectacles

**uvex i-3**



## uvex i-3 · 9190

*A new dimension in protective eyewear*

- Wearer comfort for all head widths
- Adjusts for any face shape
- Flexible side arms with variable inclination
- Soft ear pieces
- Integrated Softflex zone for different head widths
- Softflex nose piece with flexible adjustment
- Pressure-free fit, even when worn for extended periods
- Secure fit
- 100% metal free



|          |  |
|----------|--|
| Art. no. | 9190.275                                     |
| Colour   | anthracite/blue                              |
| Lens     | PC clear/UV 2C-1.2<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9190.070                               |
| Colour   | graphite/olive                         |
| Lens     | PC clear/UV 2C-1.2<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9190.145                                   |
| Colour   | orange/light blue                          |
| Lens     | PC clear/UV 2C-1.2<br>uvex optidur 4C PLUS |



|          |  |
|----------|--|
| Art. no. | 9190.280                                     |
| Colour   | black/light grey                             |
| Lens     | PC clear/UV 2C-1.2<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9190.220                                     |
| Colour   | anthracite/yellow                            |
| Lens     | PC amber/UV 2C-1.2<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9190.286                                   |
| Colour   | anthracite/red                             |
| Lens     | PC grey/UV 5-2.5<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9190.315   |
| Colour   | white/lime   |
| Lens     | PC clear/UV 2C-1.2<br>uvex supravision performance |



|          |  |
|----------|--|
| Art. no. | 9190.281                                   |
| Colour   | black/light grey                           |
| Lens     | PC grey/UV 5-2.5<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9190.850                                       |
| Colour   | anthracite/blue                                |
| Lens     | PC uvex variomatic<br>UV 5-1.1<2.5/light green |

|          |  |
|----------|--|
| Art. no. | 9190.888   |
| Colour   | grey/sky blue  |
| Lens     | PC uvex AR<br>anti-reflective on both sides<br>UV 2C-1.2 |

|          |  |
|----------|--|
| Art. no. | 9190.885   |
| Colour   | black/light grey                                   |
| Lens     | PC dark silver mirror/UV 5-3.1<br>AF on the inside |

# uvex astrospec 2.0

*A new style of guaranteed protection*

## *The next generation of our best seller:*

uvex astrospec 2.0 is the new improved version of the world's most popular uvex safety spectacles. The new design in a range of fashionable colours features pioneering technology to ensure maximum wearer acceptance, providing guaranteed protection in any situation.

The wide panorama lens offers optimum protection, with different uvex coatings depending on the area of application. The ergonomic construction with flexible 2K side arms and ventilation system with a labyrinth seal ensure optimum wearer comfort even when worn for extended periods.



**Labyrinth seal**  
Ventilation with labyrinth seal for a comfortable temperature at all times.



**Central section arc**  
uvex astrospec:  
the central section arc is a classic design.



### **Folds flat**

Fits well in any pocket: the special design of uvex astrospec 2.0 when folded is exceptionally flat and space.



### **Panorama lens**

Reliable protective eyewear: The scratch-resistant anti-fog panorama polycarbonate lens with integrated side protectors ensures optimum coverage of the eyes.



### **Flexible side arms**

Perfect fit: The flexible 2K side arms with variable inclination adapt to fit any face shape and offer optimum wearer comfort even when worn for extended periods. The combination of soft and hard components ensures a secure, pressure-free fit.

# Safety Spectacles

*uvex astrospec 2.0*



## uvex astrospec 2.0 · 9164

### A new style of guaranteed protection

- Innovative style and new technology ensure maximum wearer acceptance
- Maximum wearer comfort for all face shapes due to flexible 2K side arms and inclination
- Wraparound side arms ensure perfect fit
- Secure and pressure-free fit, even when worn for extended periods
- Ventilation with labyrinth seal helps improve climate around the eyes for increased
- Panoramic polycarbonate lens with integrated side protectors for optimum coverage of the eyes
- Folds flat



|          |  |
|----------|--|
| Art. no. | 9164.065                               |
| Colour   | blue/light blue                        |
| Lens     | PC clear/UV 2C-1.2<br>uvex optidur NCH |



|          |  |
|----------|--|
| Art. no. | 9164.275                                       |
| Colour   | anthracite/blue                                |
| Lens     | PC clear/UV 2C-1.2<br>uvex supravision extreme |



|          |  |
|----------|--|
| Art. no. | 9164.185                                   |
| Colour   | black/orange                               |
| Lens     | PC clear/UV 2C-1.2<br>uvex optidur 4C PLUS |



|          |  |
|----------|--|
| Art. no. | 9164.285                                     |
| Colour   | black/lime                                   |
| Lens     | PC clear/UV 2C-1.2<br>uvex supravision HC-AF |



|          |  |
|----------|--|
| Art. no. | 9164.220                                     |
| Colour   | black/yellow                                 |
| Lens     | PC amber/UV 2C-1.2<br>uvex supravision HC-AF |



|          |  |
|----------|--|
| Art. no. | 9164.387   |
| Colour   | black/grey   |
| Lens     | PC grey 14%/UV 5-3.1<br>uvex supravision performance |



|          |  |
|----------|--|
| Art. no. | 9164.246                                       |
| Colour   | neon orange/black                              |
| Lens     | PC grey 23%/UV 5-2.5<br>uvex supravision HC-AF |

# Safety Spectacles

*uvex pheos · uvex pheos s · uvex pheos blue*



2012

WINNER 2013

## uvex pheos · 9192

- Modern, fashionable safety spectacle design
- Duo-spherical lens with uvex supravision lens coating technology
- Rimless spectacles with wide field of vision
- Permanent anti-fog on the inside
- Extremely scratch-resistant on the outside
- Completely metal-free

Art. no. 9192.225

Colour black/green

Lens PC clear/UV 2C-1,2

uvex supravision HC-AF



Art. no. 9192.215

Colour light grey/grey

Lens PC clear/UV 2C-1,2

uvex supravision HC-AF



Art. no. 9192.385

Colour black/yellow

Lens PC amber/UV 2C-1,2

uvex supravision HC-AF



Art. no. 9192.245

Colour black/orange

Lens PC grey/

sunglare filter

UV 5-2,5

uvex supravision HC-AF



Art. no. 9192.881

Colour light grey/grey

Lens PC clear/

sunglare filter

UV 5-1,7

silverlight mirror

Anti-Fog on the inside



Art. no. 9192.280

Colour black/grey

Lens PC clear/

UV 2C-1,2

uvex supravision extreme



Art. no. 9192.285

Colour black/grey

Lens PC grey/

sunglare filter

UV 5-2,5

uvex supravision HC-AF



Art. no. 9192.281

Colour black/grey

Lens PC grey/


sunglare filter

UV 5-2,5

uvex supravision extreme



Art. no. 9959.004



Spectacle cord

- Non-metallic
- For uvex pheos/uvex pheos s 9192 models
- Individual width adjustment

## uvex pheos s · 9192

- Smaller version of uvex pheos for narrower heads
- Same properties as the standard models

Art. no. 9192.725

Colour white/green

Lens PC clear/UV 2C-1,2

uvex supravision HC-AF



Art. no. 9192.785

Colour anthracite/grey

Lens PC clear/UV 2C-1,2

uvex supravision HC-AF



Art. no. 9192.745

Colour white/orange

Lens PC grey/

sunglare filter

UV 5-2,5

uvex supravision HC-AF



Art. no. 9192.891

Colour light grey/grey

Lens PC clear/

sunglare filter

UV 5-1,7

silverlight mirror

Anti-Fog on the inside



Art. no. 9192.710

Colour black/lime

Lens PC clear/UV 2C-1,2

uvex supravision HC-AF



For further information, install the QR Code Reader and photograph the code using a smartphone.

# Safety Spectacles

*uvex pheos guard*

The innovative pheos guard system is a functional expansion of the successful pheos range. A winning combination of pheos spectacles, extra frame and headband.  
The comfortable frame creates a close seal to protect from particle ingress and splashes.



**Step 1:** position the extra frame on inside of pheos lenses.



**Step 2:** clip the side hooks of the frame into the lenses of the spectacles.

Top choice for working environments with dust exposure due to combination of anti-fog coated lenses and extra frame  
Headband can be added and suitable for working at heights or in confined spaces. Also aids compatibility with other items of PPE



**Step 3:** attach the top hook to the forehead section of lenses.



**Step 4:** if required, add headband directly to side arms by clipping hook into fitting on side arms.



## Extra frame

The clip in frames with soft padding can be ordered separately, with different frames available for the uvex pheos and uvex pheos s models respectively. Please ensure correct frame is selected when ordering (uvex pheos/uvex pheos s).

|                   |              |                  |
|-------------------|--------------|------------------|
| Art. no. 9192.001 | Colour black | for uvex pheos   |
| Art. no. 9192.002 | Colour black | for uvex pheos s |

## uvex pheos guard

**uvex pheos guard is ready for use to offer protection at all times!**  
uvex pheos guard can be ordered as a complete set as separate components.

|                   |                   |                             |                          |
|-------------------|-------------------|-----------------------------|--------------------------|
| Art. no. 9192.180 | Colour black/grey | Lens PC clear/<br>UV 2C-1,2 | uvex supravision extreme |
|-------------------|-------------------|-----------------------------|--------------------------|

|                   |                   |  |                          |
|-------------------|-------------------|--|--------------------------|
| Art. no. 9192.181 | Colour black/grey | Lens PC grey/<br>sunglare filter<br>UV 5-2,5 | uvex supravision extreme |
|-------------------|-------------------|--|--------------------------|

|                   |                   |                             |  |
|-------------------|-------------------|-----------------------------|--|
| Art. no. 9192.680 | Colour black/grey | Lens PC clear/<br>UV 2C-1,2 | narrow version<br>uvex supravision extreme |
|-------------------|-------------------|-----------------------------|--|

|                   |                   |  |  |
|-------------------|-------------------|--|--|
| Art. no. 9192.681 | Colour black/grey | Lens PC grey/<br>sunglare filter<br>UV 5-2,5 | narrow version<br>uvex supravision extreme |
|-------------------|-------------------|--|--|



## Headband

The headband can be adapted for both uvex pheos and uvex pheos s models. The headband can be easily removed.

|                   |                   |
|-------------------|-------------------|
| Art. no. 9958.020 | Colour grey/black |
|-------------------|-------------------|



# Safety Spectacles

*uvex super g · uvex super fit variomatic*



## uvex super g · 9172

### uvex super g · 9172

This exciting eyewear concept unites innovative technologies and high-tech materials.

- The world's lightest safety spectacles – only 18g – the same weight as a CD
- Wraparound style. Lenses have ideal aerodynamics and are angled forwards to provide excellent ventilation, enhancing comfort around the eye
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Exceptional optical clarity due to extremely thin lenses
- 100% metal free

|          |   |
|----------|---|
| Art. no. | 9172.210                                    |
| Colour   | crystal                                     |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

|          |   |
|----------|---|
| Art. no. | 9172.881  |
| Colour   | crystal   |
| Lens     | PC clear/sunglare<br>filter UV 5-1.7<br>silver mirror |

|          |   |
|----------|---|
| Art. no. | 9172.110                                  |
| Colour   | crystal                                   |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9172.085                              |
| Colour   | titan                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9172.065                              |
| Colour   | navy blue                             |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9172.086  |
| Colour   | titan   |
| Lens     | PC grey/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9172.265                                    |
| Colour   | navy blue                                   |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

|          |   |
|----------|---|
| Art. no. | 9172.220                                    |
| Colour   | titan                                       |
| Lens     | PC amber/UV 2-1.2<br>uvex supravision HC-AF |

|                           |   |
|---------------------------|---|
| Special edition climazone |   |
| Art. no.                  | 9172.281  |
| Colour                    | anthracite/lime   |
| Lens                      | PC grey/sunglare<br>filter UV 5-2.5<br>uvex supravision HC-AF |

|          |   |
|----------|---|
| Art. no. | 9178.850  |
| Colour   | black/transparent                                 |
| Lens     | PC/uvex variomatic<br>UV 5-1.1<2.5<br>light green |

|          |  |
|----------|--|
| Art. no. | 9178.851                                 |
| Colour   | black/transparent                        |
| Lens     | PC/uvex variomatic<br>UV 5-2<3.1<br>grey |



## uvex super fit · 9178 variomatic

### uvex variomatic – no other coating reacts as quickly

- Darkens when exposed to UV light
- Lens reacts and darkens within 10 seconds; deactivate and lightens within 30 seconds
- Perfect vision in frequently changing light conditions – no need to change or remove spectacles



# Safety Spectacles

*uvex super fit*



## uvex super fit · 9178

- Sporty design ultra-light, safety spectacles with hinged side arms
- Extra slim wraparound lenses with exceptional optical clarity
- uvex x-stream-technology side arm concept – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Excellent non-slip fit

Art. no. 9178.065  
Colour navy blue  
Lens PC clear/UV 2-1.2  
uvex optidur NCH



Art. no. 9178.265  
Colour navy blue  
Lens PC clear/UV 2-1.2  
uvex supravision HC-AF



Art. no. 9178.365  
Colour navy blue  
Lens PC clear/UV 2-1.2  
uvex supravision performance



Art. no. 9178.286  
Colour black  
Lens PC grey/  
sunglare filter  
UV 5-2.5  
uvex supravision HC-AF



Art. no. 9178.185  
Colour black  
Lens PC clear/UV 2-1.2  
uvex optidur 4C PLUS



Art. no. 9178.385  
Colour black  
Lens PC amber/UV 2-1.2  
uvex supravision performance



Art. no. 9178.315  
Colour white/lime  
Lens PC clear/UV 2-1.2  
uvex supravision performance



Art. no. 9178.064  
Colour blue  
Lens PC blue/  
UV 2-1.2  
uvex supravision HC-AF



Eyewear is autoclavable (cf. p. 29).




## uvex super fit ETC · 9178

- uvex super fit hinged spectacles for severe working conditions
- Particularly suitable for very humid atmospheres and environments with extreme temperature variation
- Permanent anti-fog on both sides – risk of fogging eliminated
- Most suitable for tunnel construction, refrigerated warehouses, catering and food industry

Art. no. 9178.415  
Colour white/grey  
Lens PC clear/UV 2-1.2  
extreme on both sides



Anti-fog coating  
after 8 sec. | uvex supravision  
extreme

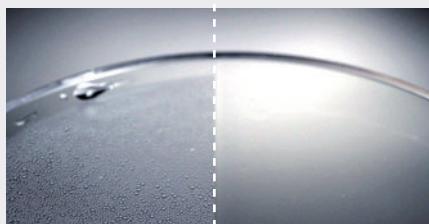

uvex supravision coated  
lenses do not fog up.  
Instead of droplets, a film  
of water is formed.



# Safety Spectacles

*uvex i-vo*



## uvex i-vo · 9160

**uvex i-vo, the „eye-volution“ in protective eyewear**

- Comfort and design without compromise
- Spectacles provide maximum wearer comfort
- uvex duo component technology – combines hard and soft components for maximum wearer comfort
- Soft components around the sensitive parts of the face (ears, forehead, nose)
- Available with fully adjustable side arms enables the wearer to achieve an individual fit
- Also available with head strap for working at heights or in confined spaces. Also aids compatibility with other items of PPE.

|  |  |  |
|--|--|--|
| Art. no. 9160.064<br>Colour blue/orange<br>Lens PC blue/UV 2-1.2<br>uvex optidur NCH                         | Art. no. 9160.265<br>Colour blue/orange<br>Lens PC clear/UV 2-1.2<br>uvex supravision HC-AF                        | Replacement lenses:<br>Art. no. 9160.055<br>Lens PC clear/UV 2-1.2<br>uvex optidur NCH |
| Art. no. 9160.520<br>Colour blue/orange<br>Lens PC amber/UV 2-1.2<br>uvex optidur NCH                        | Art. no. 9160.275<br>Colour black/grey<br>Lens PC clear/UV 2-1.2<br>uvex supravision HC-AF                         | Art. no. 9160.318<br>Lens PC grey/<br>sunglare filter UV 5-2.5<br>uvex optidur NCH     |
| Art. no. 9160.065<br>Colour blue/orange<br>Lens PC clear/UV 2-1.2<br>uvex optidur NCH                        | Art. no. 9160.285<br>Colour blue/grey<br>Lens PC clear/UV 2-1.2<br>uvex supravision HC-AF                          | Art. no. 9160.255<br>Lens PC clear/UV 2-1.2<br>uvex supravision HC-AF                  |
| Art. no. 9160.068<br>Colour blue/orange<br>Lens PC brown/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH | Art. no. 9160.268<br>Colour blue/orange<br>Lens PC brown/<br>sunglare filter<br>UV 5-2.5<br>uvex supravision HC-AF | Art. no. 9160.052<br>Lens PC amber/UV 2-1.2<br>uvex optidur NCH                        |
| Art. no. 9160.076<br>Colour black/grey<br>Lens PC grey/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH   | Art. no. 9160.185<br>Colour blue/grey<br>Lens PC clear/UV 2-1.2<br>uvex optidur 4C PLUS                            |  |
| Art. no. 9160.085<br>Colour blue/grey<br>Lens PC clear/UV 2-1.2<br>uvex optidur NCH                          |  |  |
| Art. no. 9160.120<br>Colour blue/grey<br>Lens PC clear/UV 2-1.2<br>uvex supravision HC-AF                    |  |  |

# uvex CR

*Autoclave safety eyewear that goes further*

**Innovative coating technology – the first autoclavable safety eyewear with anti-fog performance**

uvex has developed the first autoclavable safety goggles with anti-fog coating for specialist requirements in laboratories, clinics, cleanrooms and food manufacturing.

From ultra-light safety spectacles to goggles with a panorama lens, uvex CR is the ideal safety eyewear for all areas of application and specifically designed for repeated autoclave sterilisation.

**uvex CR – professional safety eyewear which compliments hygiene standards.**



## uvex super f OTG CR · 9169

- Wide panoramic field of vision
- XST side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Increased compatibility with other items of PPE
- Can be worn over most prescription spectacles

|          |  |
|----------|--|
| Art. no. | 9169.500                                 |
| Colour   | white/light blue                         |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision CR |

## uvex super fit CR · 9178

- Wide panoramic field of vision
- XST side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Increased compatibility with other items of PPE

|          |  |
|----------|--|
| Art. no. | 9178.500                                 |
| Colour   | white/light blue                         |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision CR |



## uvex ultrasonic CR · 9302

- Indirect ventilation ensures pleasant interior environment
- Can be worn over most prescription spectacles
- Wide panoramic field of vision
- Silicone headband can be easily and quickly adjusted
- Increased compatibility with other items of PPE
- Easy lens replacement

|          |  |
|----------|--|
| Art. no. | 9302.500                                 |
| Colour   | white/transparent                        |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision CR |

|                  |  |
|------------------|--|
| Replacement lens |  |
| Art. no.         | 9302.259                                 |
| Lens             | PC clear/UV 2-1.2<br>uvex supravision CR |

# Safety Spectacles

*uvex skyper · uvex skyper s · uvex skybrite s*



## uvex skyper · uvex skybrite s · 9196

- Smaller version of uvex skyper for narrower heads
- Same properties as the standard model uvex skyper 9195
- Individually adjustable side arms – 5 different side arm positions and precise lens inclination

|          |   |
|----------|---|
| Art. no. | 9196.065                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

|          |   |
|----------|---|
| Art. no. | 9196.265                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

The uvex skyper s is also available in stylishly transparent colours – uvex skybrite s.

|          |   |
|----------|---|
| Art. no. | 9196.260                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

## uvex skyper · 9195

- Fully adjustable safety spectacles
- 5 different side arm positions and precise lens inclination
- Lens and frame made from high impact-resistant plastic
- Excellent field of vision
- Frosted sidesprotect against glare
- Individually adjustable
- Lens replacement possible

|          |   |
|----------|---|
| Art. no. | 9195.265                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9195.075                              |
| Colour   | black                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9195.020                              |
| Colour   | black                                 |
| Lens     | PC amber/UV 2-1.2<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9195.078   |
| Colour   | black  |
| Lens     | PC brown/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9195.278   |
| Colour   | black  |
| Lens     | PC brown/<br>sunglare filter<br>UV 5-2.5<br>uvex supravision HC-AF |

|                     |  |
|---------------------|--|
| Replacement lenses: |  |
| Art. no.            | 9195.055                               |
| Lens                | PC clear/UV 2-1.2/<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9195.255                                     |
| Lens     | PC clear/UV 2-1.2/<br>uvex supravision HC-AF |

|          |   |
|----------|---|
| Art. no. | 9195.118  |
| Lens     | PC brown/<br>sunglare filter UV 5-2.5<br>uvex optidur NCH |



uvex skyper s



uvex skybrite s



# Safety Spectacles

*uvex skyper sx2 · uvex skybrite sx2*

## uvex skyper sx2 · 9197



- Safety spectacles with maximum functionality
- Sporty design with contoured lens. Fits all facial shapes including those with narrower faces
- Optimum protection
- Individually adjustable side arms – 5 different side arm positions and precise lens inclination
- Contoured lens shape for higher cheekbones and narrower faces

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9197.020                              |
| Colour   | blue                                  |
| Lens     | PC amber/UV 2-1.2<br>uvex optidur NCH |



|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9197.065                              |
| Colour   | blue                                  |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |



|          |  |
|----------|--|
| Art. no. | 9197.078   |
| Colour   | black  |
| Lens     | PC brown/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH |



|          |   |
|----------|---|
| Art. no. | 9197.265                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |   |
|----------|---|
| Art. no. | 9197.266  |
| Colour   | blue  |
| Lens     | PC grey/<br>sunglare filter<br>UV 5-2.5<br>uvex supravision HC-AF |



|                   |                                       |
|-------------------|---------------------------------------|
| Replacement lens: |                                       |
| Art. no.          | 9197.055                              |
| Lens              | PC clear/UV 2-1.2<br>uvex optidur NCH |



## uvex skybrite sx2 · 9197

The uvex skyper sx2 is also available in stylishly transparent colours – uvex skybrite sx2.

|          |  |
|----------|--|
| Art. no. | 9197.260                                       |
| Colour   | blue   |
| Lens     | PC clear<br>UV 2-1.2<br>uvex supravision HC-AF |



|          |  |
|----------|--|
| Art. no. | 9197.880   |
| Colour   | silver   |
| Lens     | PC clear<br>sunglare filter<br>UV 5-1.7<br>silver mirror |



# Safety Spectacles

*uvex astrospec · uvex astroflex · uvex astrolite*



## uvex astroflex · 9163

- High impact-resistant polycarbonate lens for excellent peripheral vision
- Flexible brow guard for protection against reflected light, dust and spray
- Additional shock absorption for mechanical impact
- uvex duo-flex side arms with variable side arm inclination
- 4-stage side arm length adjustment with integrated micro-ratchet mechanism allows wearers to achieve an individual fit

|          |   |
|----------|---|
| Art. no. | 9163.265                                    |
| Colour   | blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



## uvex astrolite · 9166

- Functional safety spectacles with wide field of vision
- Side arm length adjustability ensures optimum fit
- uvex duo-flex side arms with 4-stage side arm length adjustment and lens inclination
- Integrated side protectors for increased protection

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9166.080                              |
| Colour   | red/black                             |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |
| Art. no. | 9166.065                              |
| Colour   | blue/black                            |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |



# Safety Spectacles

*uvex skyguard NT · uvex skylite · uvex x-trend*



## uvex skyguard NT · 9175

- Spectacles with all-round protection
- Frame with injection moulded soft TPU
- Protects against liquid droplets and splashes; large dust particles
- Flexible, closed-pore soft components of frame adapt to individual face contours
- Easy, hygienic cleaning due to separate frame and lens concept
- 5-stage side arm length adjustment ensures optimum fit
- Article No. 9175.275 aids compatibility with safety helmets

|          |                   |
|----------|-------------------|
| Art. no. | 9175.260          |
| Frame    | blue/grey         |
|          | Adjustable length |
|          | side arms         |



|          |                   |
|----------|-------------------|
| Art. no. | 9175.261          |
| Frame    | blue/grey         |
|          | Adjustable length |
|          | side arms         |



|          |                   |
|----------|-------------------|
| Art. no. | 9175.160          |
| Frame    | blue/grey         |
|          | Adjustable length |
|          | side arms         |



|          |                   |
|----------|-------------------|
| Art. no. | 9175.275          |
| Frame    | grey/orange       |
| Lens     | PC clear/UV 2-1.2 |



## uvex skylite · 9174

- Sporty design
- Integrated frosted side protector aids glare protection
- Lens inclination adjustment

Art. no. 9174.095

Colour metallic red

Lens PC clear/UV 2-1.2  
uvex optidur NCH

Art. no. 9174.065

Colour blue

Lens PC clear/UV 2-1.2  
uvex optidur NCH

Art. no. 9174.096

Colour metallic red

Lens PC grey/sunglare  
filter UV 5-2.5  
uvex optidur NCH

Art. no. 9174.066

Colour blue

Lens PC grey/sunglare  
filter UV 5-2.5  
uvex optidur NCH



## uvex x-trend · 9177

- Large, anatomically-shaped wraparound lens offers clear visibility in all directions
- Optional uvex x-stream-technology side arms (XST): smooth transition from hard to soft plastic for noticeably improved wearer comfort, high flexibility and non-slip surface

Art. no. 9177.085

Frame black

Lens standard temple  
PC clear/UV 2-1.2  
uvex optidur NCH

Art. no. 9177.280

Frame black

Lens XST temple  
PC clear/UV 2-1.2  
uvex supravision HC-AF

Art. no. 9177.086

Frame black

Lens standard temple  
PC grey  
sunglare filter UV 5-2.5  
uvex optidur NCH

Art. no. 9177.281

Frame black

Lens XST temple  
PC grey  
sunglare filter UV 5-2.5  
uvex supravision HC-AF



# uvex academy

*Industrial protective eyewear*




## A practical introductory seminar on the use of PPE products for eye protection.

- The basic applications of PPE eyewear, including products that protect against mechanical dangers, chemicals and radiation (e. g. welding protection), and products designed for specialised applications
- Demonstration and assessment of the dangers posed by mechanical finishing, infrared and ultraviolet radiation (e. g. encountered during welding or in chemicals), illustrated by case studies
- Assessment of the risk of eye injury in the workplace
- Explanation of how these risks can be dealt with efficiently in each workplace
- Comprehensive overview of the requirements of industrial protective eyewear, standards, applications, risk assessment and how to care for protective eyewear
- Information on the classification of protection products based on their labelling and the areas of application of the various types of equipment

### Target group

Those responsible for the work-related health and safety of employees within a company, e.g. health and safety officers and specialist purchasers.

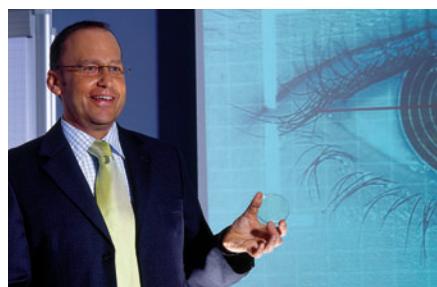

For more information or to book a place, please visit [uvex-academy.de](http://uvex-academy.de),  
call +49 (0)911 9736 1710 or email [academy@uvex.de](mailto:academy@uvex.de)

**uvex** academy

 **VDSI** 

# Safety Spectacles

*uvex futura · uvex cosmoflex · uvex meteor*



## uvex futura · 9180 · 9182

### uvex futura · 9180 · 9182

- Classic safety spectacles with extremely wide field of vision
- Outstanding close fit
- uvex duo-flex side arms with 4-stage side arm length adjustment and adjustable side arm inclination
- Replaceable polycarbonate lenses
- Available with a welding lens
- **9182 model for narrower heads**

Art. no. 9180.015  
Colour brown  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



Art. no. 9180.125  
Colour brown  
Lens PC clear/UV 2-1,2  
uvex optidur 4C PLUS



Art. no. 9182.005  
Colour brown  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



Replacement lenses:

Art. no. 9180.055  
Lens PC clear/UV 2-1,2  
uvex optidur NCH

Art. no. 9180.155  
Lens PC clear/UV 2-1,2  
uvex optidur 4C PLUS

Art. no. 9182.055  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



## uvex cosmoflex · 9130

- Twin-lens spectacles with excellent fit
- Integrated brow guard provides protection against overhead particles from
- uvex duo-flex side arms with 4-stage side arm length adjustment and integrated side protectors
- Spectacles fit well in breast pocket due to flat design
- Exceptional wearer comfort

Art. no. 9130.305  
Colour transparent grey  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



Art. no. 9130.302  
Colour transparent grey  
Lens HG clear



## uvex meteor · 9134



- Compact twin-lens spectacle
- Optimum protection of the eye area
- Side arm length adjustment and softform ear pieces allows wearers to achieve a comfortable fit in cold condition
- Adapts to the wearer's head shape
- Secure and comfortable fit, even when worn for extended periods
- Spectacles fit well in breast pocket due to flat design
- Available as standard or prescription safety spectacles

Art. no. 9134.005  
Colour transparent grey  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



Art. no. 9134.065  
Colour light blue  
transparent  
Lens PC clear/UV 2-1,2  
uvex optidur NCH



# Safety Spectacles

*uvex athletic*



## uvex athletic • 9185

- Highly adaptable spectacles
- Easy lens replacement with x-press clip (XPC)
- Wraparound twin-lens construction for optimum protection and wide field of vision
- Soft, anti-slip surface of temple pieces as part of uvex x-stream-technology side arm concept (XST) for a secure fit
- Available in a welding lens

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9185.075                              |
| Colour   | titan                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |



|                    |                   |                  |
|--------------------|-------------------|------------------|
| Replacement lenses | Art. no.          | 9185.055         |
| Lens               | PC clear/UV 2-1.2 | uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9185.175                                  |
| Colour   | titan                                     |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |



|          |   |
|----------|---|
| Art. no. | 9185.155                                  |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |

|          |   |
|----------|---|
| Art. no. | 9185.021  |
| Colour   | titan   |
| Lens     | PC amber light/<br>UV 2-1.2<br>uvex optidur NCH |



|          |   |
|----------|---|
| Art. no. | 9185.052                                    |
| Lens     | PC amber light/UV 2-1.2<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9185.076   |
| Colour   | titan  |
| Lens     | PC grey/<br>sunglare filter UV 5-2.5<br>uvex optidur NCH |



|          |  |
|----------|--|
| Art. no. | 9185.016   |
| Lens     | PC grey/sunglare filter UV 5-2.5<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9185.885*   |
| Colour   | titan   |
| Lens     | PC brown/<br>sunglare filter 2-3<br>sky-orange mirror |



|          |  |
|----------|--|
| Art. no. | 9185.016   |
| Lens     | PC grey/sunglare filter UV 5-2.5<br>uvex optidur NCH |

**\* Mirrored orange lens:**  
Heavily tinted UV 2-3 sun glare lens  
(approx. 83%) in a pleasant shade of  
brown, for protection from extreme  
glare, sporty design due to mirrored  
orange front.



- Eye-catching, fashionable design
- Innovative softgrip side pieces
- Comfortable nose cushioning
- Various different lenses available



Patented rotating clip for quick  
and easy lens replacement

# Safety Spectacles

*uvex polavision · uvex cybric · uvex cyberguard*

## uvex polavision · 9231



### Improving recognition

- Comfortable twin-lens spectacle
- Polarisation filter reliably protects against eye strain
- Particularly suitable for reflective surfaces (offshore, maritime conditions)
- Protects against reflections and optical irritations outdoors (e.g. water surfaces) for greater visual comfort

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9231.960                              |
| Colour   | black/white                           |
| Lens     | PC grey/UV 5-3.1<br>scratch-resistant |



## uvex cybric · uvex cyberguard · 9188

- Robust, sporty twin-lens safety spectacle design
- Wraparound lens offers excellent field of vision for improved safety
- Four pads of the uvex quattroflex temple in the sensitive ear region ensure a comfortable, pressure-free fit
- Fully adjustable side arms enable the wear to achieve an individual fit
- Straight side arms grip the side of the head not behind the ears for a secure, comfortable, none slip fit

Art. no. 9188.020

Colour black/orange  
Lens PC amber/UV 2-1.2  
uvex optidur NCH



Art. no. 9188.881

Colour black/orange  
Lens PC grey/  
sunglare filter  
UV 5-2.5/blue mirror  
uvex optidur NCH



Art. no. 9188.075

Colour black/orange  
Lens PC clear/UV 2-1.2  
uvex optidur NCH



Art. no. 9188.076

Colour black/orange  
Lens PC grey/sunglare  
filter UV 5-2.5  
uvex optidur NCH



Art. no. 9188.078

Colour black/orange  
Lens PC brown/sunglare  
filter UV 5-2.5  
uvex optidur NCH



Spare frame

Art. no. 9188.001  
Colour black



The frames can be bought  
individually and are suitable for  
all uvex cybric models.

Art. no. 9188.175

Colour black/orange  
Lens PC clear/UV 2-1.2  
uvex optidur 4C PLUS



# Safety Spectacles

*uvex racer MT · uvex winner*



## uvex racer MT · 9153

- Sporty, dynamic single-lens spectacles
- Lens connected to frame at three points without screws
- High level of protection when subjected to mechanical stress
- Very low profile metal frame
- High flexibility and extremely low weight
- Individually adjustable nose piece

|          |   |
|----------|---|
| Art. no. | 9153.105  |
| Temples  | gun   |
| Lens     | PC clear/UV 2C-1.2<br>scratch-resistant,<br>non-fogging |



|          |  |
|----------|--|
| Art. no. | 9153.106   |
| Temples  | gun  |
| Lens     | PC grey/sunglare<br>filter UV 5-2.5<br>scratch-resistant,<br>non-fogging |



|          |   |
|----------|---|
| Art. no. | 9153.881  |
| Temples  | gun   |
| Lens     | PC clear/sunglare<br>filter UV 5-1.7<br>silver mirror |



## uvex winner · 9159

- The must have metal framed spec
- Close fitting offers high levels of protection and a wide field of visibility
- Sprung side arms provide secure fit
- Hinged nose pads adapt to the wearer
- Comfortable fit, even when worn for extended periods

|          |  |
|----------|--|
| Art. no. | 9159.005                               |
| Colour   | gun                                    |
| Lens     | PC clear/UV 2-1.2<br>scratch-resistant |



|          |  |
|----------|--|
| Art. no. | 9159.016                               |
| Colour   | gun                                    |
| Lens     | PC green/UV 2-1.7<br>scratch-resistant |



|          |  |
|----------|--|
| Art. no. | 9159.105   |
| Colour   | gun  |
| Lens     | PC clear/UV 2-1.2<br>scratch-resistant,<br>non-fogging |



|          |  |
|----------|--|
| Art. no. | 9159.116   |
| Colour   | gun  |
| Lens     | PC green/UV 2-1.7<br>scratch-resistant,<br>non-fogging |



|          |  |
|----------|--|
| Art. no. | 9159.118   |
| Colour   | gun  |
| Lens     | PC grey/sunglare<br>filter UV 5-2.5<br>scratch-resistant,<br>non-fogging |



# Safety Spectacles

*uvex ceramic · uvex mercury · uvex 9148 · uvex 9149*

## uvex ceramic · 9137



### uvex mercury · 9155

- Slim, steel blue men's spectacles
- Spectacles fit well in breast pocket due to flat design
- Transparent side shields for increased protection
- Excellent peripheral vision
- Maximum wearer comfort

Art. no. 9155.005  
Colour steel blue  
Size 54/19  
Lens PC clear/UV 2-1.2  
uvex optidur NCH



- Safety spectacles in contemporary twin-lens design
- Specially designed for narrower heads
- Combination of a plastic middle section and metal side pieces
- Spectacles fit well in breast pocket due to flat design

Art. no. 9137.065  
Colour blue  
Size 49/20  
Lens PC clear/UV 2-1.2  
uvex optidur NCH



Replacement lenses  
Art. no. 9137.055  
Lens PC clear/UV 2-1.2  
uvex optidur NCH



## uvex · 9148



### uvex · 9149

- Classic metal frame with double nose piece
- Anatomically shaped, adjustable nose pads
- Transparent side shields for increased protection
- Easily adjustable TPE ear pieces

Art. no. 9149.005  
Colour gun  
Lens PC clear/UV 2-1.2  
uvex optidur NCH  
Size 55/17



- Fashionable aviator-style metal frame
- Anatomically shaped, adjustable nose pads
- Transparent side shields for increased protection
- Easily adjustable comfortable Duofit ear pieces

Art. no. 9148.005  
Colour gun  
Lens PC clear/UV 2-1.2  
uvex optidur NCH  
Size 51/20



# Overspecs

*Visitor spectacles and everyday use*



*uvex overspecs are suited for a range of applications and fit over most prescription spectacles. Whether as visitor spectacles or as overspecs for short-term tasks, they allow perfect vision due to the large panoramic lenses.*

## uvex · 9161

- Overspecs for use over prescription spectacles
- Unrestricted peripheral vision
- Pressure-free fit through uvex duo-flex side arms
- Suitable for use over most prescription spectacles
- Model 9161.014 available without coating and with polycarbonate side arms

|                 |   |
|-----------------|---|
| <b>Art. no.</b> | 9161.005                                  |
| <b>Temples</b>  | blue/black                                |
| <b>Lens</b>     | PC clear/UV 2-1.2<br>uvex optidur NCH     |
|                 |   |
| <b>Art. no.</b> | 9161.305                                  |
| <b>Temples</b>  | blue/black                                |
| <b>Lens</b>     | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |
|                 |   |
| <b>Art. no.</b> | 9161.014                                  |
| <b>Temples</b>  | clear                                     |
| <b>Lens</b>     | PC clear/UV 2-1.2<br>uncoated             |
|                 |   |



## uvex ultraspec · 9165

- Single lens safety spectacles with extremely broad field of vision
- Slats in temples allow effective indirect ventilation for increased wearer comfort
- High impact-resistant polycarbonate lens and side arms

|                 |   |
|-----------------|---|
| <b>Art. no.</b> | 9165.005                                  |
| <b>Temples</b>  | clear                                     |
| <b>Lens</b>     | PC clear/UV 2-1.2<br>uvex optidur NCH     |
|                 |   |
| <b>Art. no.</b> | 9165.105                                  |
| <b>Temples</b>  | clear                                     |
| <b>Lens</b>     | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |
|                 |   |



# Safety Spectacles

*uvex super OTG · uvex super f OTG*



## uvex super OTG · 9169

- Hingeless side arms with extremely flexible soft ear pieces
- Suitable for use over most prescription spectacles
- Unrestricted peripheral vision
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Maximum wearer comfort
- 100% metal free

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9169.065                              |
| Temples  | navy blue                             |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9169.080                              |
| Temples  | black                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9169.081  |
| Temples  | black   |
| Lens     | PC grey/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9169.260                                    |
| Temples  | navy blue                                   |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



## uvex super f OTG · 9169

- New side arm hinge concept with extremely soft ear pieces
- Side arms with extremely flexible soft ear pieces
- Suitable for use over most prescription spectacles
- Unrestricted peripheral vision
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Maximum wearer comfort

|          |                                       |
|----------|---------------------------------------|
| Art. no. | 9169.585                              |
| Temples  | black                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex optidur NCH |

|          |   |
|----------|---|
| Art. no. | 9169.586  |
| Temples  | black   |
| Lens     | PC grey/<br>sunglare filter<br>UV 5-2.5<br>uvex optidur NCH |

|          |  |
|----------|--|
| Art. no. | 9169.586                                 |
| Temples  | white/light blue                         |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision CR |

Eyewear is autoclavable (cf. p. 29).



Available with  
uvex variomatic lens

|          |  |
|----------|--|
| Art. no. | 9169.850   |
| Temples  | black  |
| Lens     | PC/uvex variomatic<br>UV 5-1,1<2.5/<br>light green |



# Safety Goggles

*uvex carbonvision*



## uvex carbonvision · 9307

- Low profile, wraparound design with innovative frame, strap and material development for a significantly lighter weight goggle
- High tech materials combine hard and soft components which adapt to wearer's face creating soft, effective seal around the eyes
- Soft seal protects against dust, splashes and mechanical hazards
- Easy and hygienic cleaning due to detachable frame and lens concept
- Adjustable high quality strap for individual and pressure-free fit

- uvex permanent supravision extreme lens coating offers excellent anti-fog performance preventing goggles from steaming up
- Compatible with other items of PPE such as masks, hearing protection or helmets
- Also available with neoprene headband and detectable

Art. no. 9307.375  
Colour black/grey  
Lens PC clear/UV 2-1.2  
uvex supravision extreme



Art. no. 9307.276  
Colour black/grey  
Lens PC grey/sunglare filter UV 5-2.5  
uvex supravision extreme




Art. no. 9307.365  
Colour black/grey  
Model with neoprene headband  
Lens PC clear/UV 2-1.2  
uvex supravision extreme



Convenient clip to remove headband before cleaning



Flexible soft components adapt perfectly to your face shape and ensure a perfect fit.

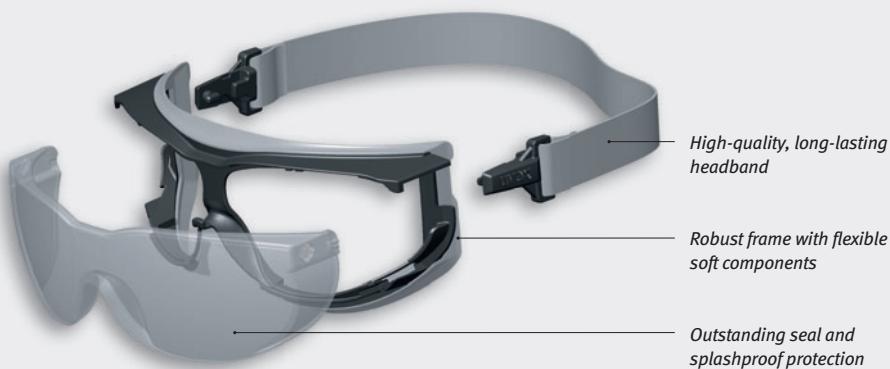

High-quality, long-lasting headband

Robust frame with flexible soft components

Outstanding seal and splashproof protection

# Safety Goggles

*uvex ultrasonic*



## uvex ultrasonic · 9302

- Wide-vision goggles with exceptional wearer comfort
- Combines hard and soft components which adapt to the wearer's face creating soft, effective seal around the eyes
- uvex supravision lens coating technology – anti-fog on the inside of the lens, scratch resistant on the outside, permanent – won't wash off
- Wide fully adjustable, high quality head strap offers pressure-free fit, even when worn for extended periods
- Comprehensive side protection around the eye area, even when worn over prescription spectacles
- Indirect ventilation ensures pleasant comfortable interior environment
- Sporty ski goggle design with wide panoramic field of vision
- Lens replacement possible
- Soft materials aid compatibility with respirators and other items of PPE
- Can be worn over most prescription spectacles

|          |   |
|----------|---|
| Art. no. | 9302.245                                    |
| Colour   | orange/grey                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |   |
|----------|---|
| Art. no. | 9302.600  |
| Model    | with reduced ventilation                          |
| Colour   | grey/blue   |
| Lens     | PC clear/<br>UV 2-1.2<br>uvex supravision extreme |



|                    |          |   |
|--------------------|----------|---|
| Replacement lenses | Art. no. | 9302.255                                    |
| Lens               |          | PC clear/UV 2-1.2<br>uvex supravision HC-AF |


|          |   |
|----------|---|
| Art. no. | 9302.285                                    |
| Colour   | grey/black                                  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |   |
|----------|---|
| Art. no. | 9302.601                                    |
| Model    | with reduced ventilation                    |
| Colour   | red/black                                   |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |  |
|----------|--|
| Art. no. | 9302.247   |
| Colour   | orange/grey  |
| Lens     | PC brown/sunglare<br>filter UV 5-2.5<br>uvex supravision HC-AF |

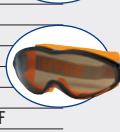

|          |   |
|----------|---|
| Art. no. | 9302.281                                    |
| Model    | with rubber headband                        |
| Colour   | grey/black                                  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |   |
|----------|---|
| Art. no. | 9302.275                                      |
| Colour   | grey/lime                                     |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision extreme |



|          |  |
|----------|--|
| Art. no. | 9302.500                                 |
| Model    | uvex CR                                  |
| Colour   | white/transparent                        |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision CR |

Eyewear is autoclavable (cf. p. 29).

|          |   |
|----------|---|
| Art. no. | 9302.257  |
| Lens     | PC brown/sunglare filter UV 5-2.5<br>uvex supravision HC-AF |

|          |  |
|----------|--|
| Art. no. | 9302.256   |
| Lens     | PC grey/sunglare filter UV 5-2.5<br>uvex supravision HC-AF |



The uvex ultrasonic welding safety goggles are described on page 52 under welding protection.



Helmet and hearing protection not included!  
Additional adaptors are needed in order to fit the ultrasonic without ear defenders:  
Art. no. 9924.010

|          |   |
|----------|---|
| Art. no. | 9302.043                                    |
| Model    | flip-up model                               |
| Colour   | green/black                                 |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |
| Flip-up  | PC grey                                     |
|          | uvex infradur PLUS<br>welding shade 3       |

|          |  |
|----------|--|
| Art. no. | 9302.510   |
| Model    | with reduced ventilation for combining with a helmet and ear defenders uvex 2H, uvex 3H and uvex 3200H |
| Colour   | grey/blue  |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF  |

# Safety Goggles

*uvex ultravision*



## uvex ultravision · 9301

- Ergonomic wide-vision goggles with unrestricted peripheral vision
- Sophisticated ventilation system ensures exceptional wearer comfort
- Optional anti-fog lenses
- Lens replacement possible
- Outstanding close and pressure-free fit
- Special models available:
  - with tear-off lenses 9301.813
  - with additional comfort cushioning 9301.716
  - red gas-tight version 9301.603
  - with wide nose piece for combination with dust masks 9301.906

## 9301.555

- Attaches to the uvex ultravision goggle for optimum protection. Unlike conventional face shields, the goggle completely seals and protects the eyes
- Offers additional facial protection against liquid splash and flying particles
- Can be worn over respirators
- Lifts via hinge mechanism



|          |   |
|----------|---|
| Art. no. | 9301.555                                    |
| Model    | faceguard model                             |
| Colour   | transparent grey                            |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |



|          |   |
|----------|---|
| Art. no. | 9301.318                                    |
| Model    | faceguard                                   |
| Colour   | transparent grey                            |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

## Art. no. 9301.714

|        |                         |
|--------|-------------------------|
| Colour | transparent grey        |
| Lens   | CA clear<br>non-fogging |



## Art. no. 9301.605

|        |   |
|--------|---|
| Colour | transparent grey                          |
| Lens   | PC clear/UV 2-1.2<br>uvex optidur 4C PLUS |



## Replacement lenses

|          |                       |
|----------|-----------------------|
| Art. no. | 9300.517              |
| Lens     | CA clear, non-fogging |

|          |   |
|----------|---|
| Art. no. | 9300.956  |
| Lens     | CA clear, non-fogging,<br>for wide nose section |

|          |   |
|----------|---|
| Art. no. | 9301.255                                    |
| Lens     | PC clear/UV 2-1.2<br>uvex supravision HC-AF |

|          |                             |
|----------|-----------------------------|
| Art. no. | 9300.316                    |
| Lens     | tear-off-films for 9301.813 |

|                                 |       |
|---------------------------------|-------|
| Colour                          | clear |
| Minimum purchasing quantity: 10 |       |

## N.B.:

CA lenses do not fit in PC models and vice versa.

## Art. no. 9301.813

### Mouth shield

|        |                       |
|--------|-----------------------|
| Colour | red, gastight         |
| Lens   | PC clear/<br>UV 2-1.2 |



## Art. no. 9301.603

|        |                       |
|--------|-----------------------|
| Colour | red, gastight         |
| Lens   | PC clear/<br>UV 2-1.2 |

### uvex supravision HC-AF



## Art. no. 9301.317

|              |                             |
|--------------|-----------------------------|
| Mouth shield | PC clear/<br>for all models |
| 9301,        | not mounted                 |



## Helmet and hearing protection not included!

Additional adaptors are needed in order to fit the ultravision without ear defenders:  
Art. no. 9924.010

# Safety Goggles

uvex HI-C · uvex 9405 · uvex 9305

## uvex HI-C · 9306



**Patented bellows design**

- Highly flexible yet stable
- Adjusts to fit all face shapes perfectly
- Maximum wearer comfort
- Excellent shock absorption



**Patented ventilation system**

- Additional side ventilation via integrated air channels
- Extended lens provides better protection against splash



**Changing lenses**

- Lenses can be changed quickly and easily, cutting costs



**All-round ventilation**

- Incoming and out going air circulated better thanks to a new all-round ventilation system



**Adjustable**

- Can be adjusted quickly and easily, providing reliable all-round protection due to excellent fit



**Wide field of vision and compatible with prescription glasses**

- Wide vision in line with standard requirements
- Can be worn comfortably on top of prescription glasses

## uvex · 9405

• Wide-vision goggles with all-round ventilation system

- Can be worn over most prescription spectacles
- Upper part of body frosted to protect against glare
- Headband can be easily and quickly adjusted
- Compatible with half masks and filtering half masks

|          |                         |
|----------|-------------------------|
| Art. no. | 9405.714                |
| Colour   | transparent grey        |
| Lens     | CA clear<br>non-fogging |

|                  |                         |
|------------------|-------------------------|
| Replacement lens |                         |
| Art. no.         | 9400.517                |
| Lens             | CA clear<br>non-fogging |



## uvex · 9305

• Classic wide-vision goggles with sophisticated ventilation system

- Available with elasticated fabric or rubber headband
- Washable, fluff-free rubber headband

|          |                      |
|----------|----------------------|
| Art. no. | 9305.514             |
| Colour   | transparent grey     |
| Model    | with rubber headband |

|          |                       |
|----------|-----------------------|
| Art. no. | 9305.214              |
| Colour   | transparent grey      |
| Model    | with textile headband |

|          |                       |
|----------|-----------------------|
| Art. no. | 9305.714              |
| Colour   | transparent grey      |
| Model    | with textile headband |



# laservision

## *Innovative laser protection solutions*

Rapid developments in laser technology mean that laser protection is becoming ever more important in terms of personal safety. New laser applications in all areas of industry, research and medicine demand new and unique safety and protection solutions. laservision, a member of the uvex group is one of the leading global producers of laser protection products. It develops, manufactures and distributes laser protection glasses, large-scale laser protection (mobile screens and safety curtains), small filters and cabin windows for all laser types and applications.

### Laser protective spectacles and cabin windows

Based on physical properties, such as radiation intensity and focusing capability (spatial coherence), laser light is potentially very hazardous, particularly for the eyes. The valid laser protective norms (EN 207 and EN 208) and safety regulations (BGV B2) stipulating the wearing of laser safety eyewear are the response to these hazards.

This laser safety eyewear with coated or absorbent special lenses and plastics is a core focus of the laservision product portfolio. We have more than 30 years of experience in this technology. At the same time, laservision offers an extensive range of glass and plastic filter materials as windows for installation in machine housings, partitions and curtains.

### Screens

Alternatively, it is possible to screen out laser radiation by mechanical means and to protect potentially endangered personnel during laser operation in this way. Screening against laser radiation may take the form of curtains, partitions or even fixed insulating walls. These can be installed in the workplace, or they may be integrated in machinery housing. laservision offers standard and customer-specific solutions for screening which comply with the applicable standards. On account of the wide range of possible materials and solutions, we advise our customers on their protection issues in situ at their own premises in order to find the best possible solution.



### Active protection systems

For automated laser processing operations, i.e. operations which are not under constant surveillance, to be classified as test class T1, European standard EN 60825-4 housing must maintain a survival rate of 30,000 seconds. However, where laser output and radiation intensity are constantly on the increase, rates of this order are no longer achievable with passive protection systems, particularly in the case of window materials.

The newly patented active cabin window system from laservision provides the ideal and simplest solution to this problem in the form of integrated electronics installed within the safety circuitry of the laser system.

When laser beams hit the plastic pane with enough output to activate the sensor integrated in the frame, the laser is immediately switched off before hazardous radiation can be transmitted through the pane. The system gives users a complete CE-certified class T1 system in line with the applicable machine construction directive. In combination with an active cabin wall system, this makes a complete and certifiable solution available for industrial high-performance laser units operating in the 820 to 1100 nm wavelength spectrum.

### Training

laservision, in cooperation with the uvex academy offers a programme of modular courses on laser safety. These feature compulsory annual laser safety training together with special courses for those responsible for laser safety, advanced customised seminars, an internship in laser safety and measuring techniques.

laservision is an active and knowledgeable partner for various National and International standards committees and takes part in domestic and International research projects in the field of laser safety in conjunction with research institutions.

# laservision

WE PROTECT YOUR EYES

LASERVISION GmbH & Co. KG

Telefon: +49 911 973681-00 · E-Mail: info@lvg.com · uvex-laservision.com



# Welding Protection

*uvex i-vo · uvex super fit · uvex super f OTG · uvex ultrasonic flip-up*

A new generation of welding protection eyewear available with different grey-tint lenses and various protection classes. The innovative technology affords protection from UV and infrared light while maintaining perfect colour recognition in accordance with EN 172.

The special uvex infradur AF coating has anti-fog properties which prevents the inside of the lenses misting up and the extreme scratch-resistance on the outside keeps damage from welding sparks to an absolute minimum.

The new welding safety eyewear fits the face perfectly and is extremely comfortable – enhancing the wearer's experience.

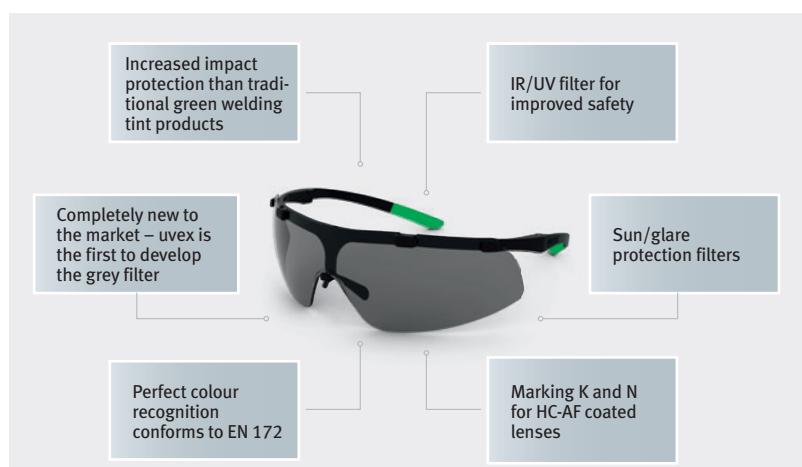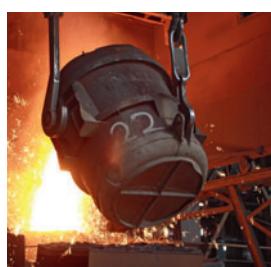

**uvex i-vo · 9160**



**uvex super fit · 9178**



**uvex super f OTG · 9169**



**uvex ultrasonic flip-up · 9302**



# Welding Protection

*uvex i-vo · uvex super fit*

All welding products have polycarbonate lenses providing protection against impact as well as UV rays, IR rays and visible glare.

**The products do not provide protection against laser beams!**

For expert advice on safety and in selecting the right laser protection goggles, talk to our specialists

**laservision**  
WE PROTECT YOUR EYES

Call them on +49 (0)911 9736 8100.

**uvex-laservision.de**



## uvex super fit · 9178

- Sporty design ultra-light, safety spectacles with hinged side arms
- Two different protection classes with a grey tint
- Perfect colour recognition conforms to EN 172
- uvex permanent anti-fog coating on the inside of the lens, extreme scratch resistant on the outside Extra slim wraparound lenses with exceptional optical clarity
- uvex x-stream-technology side arm concept – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Mechanical strength: F (45 m/s)



|          |                   |                  |
|----------|-------------------|------------------|
| Art. no. | 9178.041          | 9178.043         |
| Colour   | black/green       | black/green      |
| Lens     | PC grey           | PC grey          |
|          | welding shade 1.7 | welding shade 3  |
|          | uvex infradur AF  | uvex infradur AF |



| Art. no. | 9160.041          | 9160.043         | 9160.045         |
|----------|-------------------|------------------|------------------|
| Colour   | black/green       | black/green      | black/green      |
| Lens     | PC grey           | PC grey          | PC grey          |
|          | welding shade 1.7 | welding shade 3  | welding shade 5  |
|          | uvex infradur AF  | uvex infradur AF | uvex infradur AF |



# Welding Protection

*uvex 9116 · uvex 9104 · uvex super f OTG*

## uvex · 9116



### uvex · 9104

- Close-fitting frame design, anatomically shaped nose pads
- Integrated side protectors and brow guard
- Frame edge designed specifically to protect against particles from below
- Fully adjustable side arm length and inclination allows wearers to achieve an individual fit
- Adjustable Softform ear pieces
- New filter technology, perfect colour recognition conforms to EN 172
- UV and IR radiation protection
- Minimises damage from welding sparks
- Flip-up and easily replaceable filter



| Art. no.     | 9104.041             | 9104.043             | 9104.045             | 9104.046             |
|--------------|----------------------|----------------------|----------------------|----------------------|
| Colour       | black/green          | black/green          | black/green          | black/green          |
| Lens         | PC clear             | PC clear             | PC clear             | PC clear             |
| Flip-up      | uvex optidur 4C PLUS |
| Lens         | black                | black                | black                | black                |
| Flip-up      | PC grey              | PC grey              | PC grey              | PC grey              |
| Lens         | welding shade 1.7    | welding shade 3      | welding shade 5      | welding shade 6      |
| Replacement  | uvex infradur PLUS   | uvex infradur PLUS   | uvex infradur PLUS   | uvex infradur PLUS   |
| flip-up part | 9104.081             | 9104.083             | 9104.085             | 9104.086             |



| Art. no. | 9116.041           | 9116.043           | 9116.045           | 9116.046           |
|----------|--------------------|--------------------|--------------------|--------------------|
| Colour   | black/green        | black/green        | black/green        | black/green        |
| Lens     | PC grey            | PC grey            | PC grey            | PC grey            |
| Flip-up  | welding shade 1.7  | welding shade 3    | welding shade 5    | welding shade 6    |
| Lens     | uvex infradur PLUS | uvex infradur PLUS | uvex infradur PLUS | uvex infradur PLUS |



## uvex super f OTG · 9169



- Modern welding cover spectacles with side arm hinge concept
- Can be worn over most prescription spectacles
- Unrestricted peripheral vision
- uvex x-stream technology – side arms graduate from hard to soft material – grips the head for a secure non slip fit
- Maximum wearer comfort
- New filter technology, perfect colour recognition conforms to EN 172
- uvex permanent anti-fog coating on the inside of the lens, extreme scratch resistant on the outside
- Mechanical strength: F (45 m/s)
- Minimised damage from welding sparks



| Art. no. | 9169.543         | 9169.545         |
|----------|------------------|------------------|
| Colour   | black/green      | black/green      |
| Lens     | PC grey          | PC grey          |
| Flip-up  | welding shade 3  | welding shade 5  |
| Lens     | uvex infradur AF | uvex infradur AF |

# Welding Protection

*uvex athletic · uvex futura · uvex astrospec*



## uvex futura · 9180

- Classic safety spectacles with extremely wide field of vision
- Outstanding close fit
- uvex duo-flex side arms with 4-stage side arm length adjustment and adjustable side arm
- Integrated microratchet mechanism in ear piece
- Replaceable polycarbonate lenses
- Minimises damage from welding sparks



|          |  |  |  |  |  |
|----------|--|--|--|--|--|
| Art. no. | 9180.041   | 9180.043   | 9180.044   | 9180.045   | 9180.046   |
| Colour   | black  | black  | black  | black  | black  |
| Lens     | PC green<br>welding shade 1.7<br>uvex infradur<br>PLUS | PC green<br>welding shade 3<br>uvex infradur<br>PLUS | PC green<br>welding shade 4<br>uvex infradur<br>PLUS | PC green<br>welding shade 5<br>uvex infradur<br>PLUS | PC green<br>welding shade 6<br>uvex infradur<br>PLUS |

|                            |          |          |          |          |          |
|----------------------------|----------|----------|----------|----------|----------|
| Replace-<br>ment<br>lenses | 9180.081 | 9180.083 | 9180.084 | 9180.085 | 9180.086 |
|----------------------------|----------|----------|----------|----------|----------|

## uvex athletic · 9185

- Fashionable welding safety spectacles with extremely wide field of vision Wraparound twin-lens construction for optimum protection and wide field of vision
- Easy lens replacement with x-press clip (XPC)
- Minimum damage from welding sparks
- Replacement lenses available



|                    |   |   |   |
|--------------------|---|---|---|
| Art. no.           | 9185.042  | 9185.043  | 9185.045  |
| Colour             | black   | black   | black   |
| Lens               | PC green<br>welding shade 2<br>uvex infradur PLUS | PC green<br>welding shade 3<br>uvex infradur PLUS | PC green<br>welding shade 5<br>uvex infradur PLUS |
| Replacement lenses | 9185.082  | 9185.083  | 9185.085  |



## uvex astrospec · 9168

- Modern welding safety spectacles
- uvex duo-flex side arms increase wearer comfort, 4-stage side arm length adjustment allows wearers to achieve an individual fit
- High impact-resistant polycarbonate lens with integrated side protectors
- Easy lens replacement
- Minimises damage from welding sparks



|                    |   |   |   |   |
|--------------------|---|---|---|---|
| Art. no.           | 9168.081  | 9168.082  | 9168.184  | 9168.084  |
| Colour             | black   | black   | black   | black   |
| Lens               | PC green<br>welding shade 1.7<br>uvex infradur PLUS | PC green<br>welding shade 3<br>uvex infradur PLUS | PC green<br>welding shade 4<br>uvex infradur PLUS | PC green<br>welding shade 5<br>uvex infradur PLUS |
| Replacement lenses | 9168.122  | 9168.129  | 9168.124  | 9168.127  |



# Welding Protection

uvex 9162 · uvex 9207

## uvex · 9162



- Comfortable polycarbonate welding cover spectacles
- Unrestricted peripheral vision
- Can be worn over most prescription spectacles
- Pressure-free fit through uvex duo-flex side arms
- Indirect ventilation through special side arm design with large side protectors
- 4-stage side arm length adjustment allows wearers to achieve an individual fit
- Polycarbonate lens with frosted brow guard helps protect against glare
- Minimum damage from welding sparks



| Art. no.           | 9162.041           | 9162.044           | 9162.045           | 9162.046    |
|--------------------|--------------------|--------------------|--------------------|-------------|
| Colour             | black/black        | black/black        | black/black        | black/black |
| Lens               | PC green           | PC green           | PC green           | PC green    |
| welding shade 1.7  | welding shade 4    | welding shade 5    | welding shade 6    |             |
| uvex infradur PLUS | uvex infradur PLUS | uvex infradur PLUS | uvex infradur PLUS |             |



## uvex · 9207

- Clip-on flip-up mechanism with robust metal clip
- Suitable for uvex ceramic, uvex meteor and uvex cosmfex frames
- Large lenses provide complete coverage
- Protection for lenses
- Protective case included
- Available with uvex infradur PLUS lenses as an alternative to flip-up welding shade spectacles
- Minimum damage from welding sparks



| Art. no. | 9207.005         | 9207.116                 | 9207.041           |
|----------|------------------|--------------------------|--------------------|
| Lens     | clip-on          | clip-on                  | clip-on            |
|          | PC clear         | PC grey                  | PC green           |
|          | UV 2-1.2         | sunglare filter UV 5-2.5 | welding shade 1.7  |
|          | uvex optidur NCH | uvex optidur NCH         | uvex infradur PLUS |



| Art. no. | 9207.044           | 9207.045           | 9207.046           |
|----------|--------------------|--------------------|--------------------|
| Lens     | clip-on            | clip-on            | clip-on            |
|          | PC green           | PC green           | PC green           |
|          | welding shade 4    | welding shade 5    | welding shade 6    |
|          | uvex infradur PLUS | uvex infradur PLUS | uvex infradur PLUS |



# Safety Spectacles

*uvex ultrasonic flip-up · uvex ultravision*

## uvex ultrasonic flip-up · 9302

- Sporty design and wide panoramic field of vision
- Combines hard and soft components which adapt to the wearer's face creating soft, effective seal around the eyes
- High level of protection for professional welders
- Permanent anti-fog on the inside
- Comprehensive side protection around the eye area, even when worn over prescription spectacles
- Perfect colour recognition conforms to EN 172
- Indirect ventilation ensures pleasant interior environment
- New grey filter technology
- Flip-up welding lens which can easily be replaced
- Minimises damage from welding sparks
- Can be worn over most prescription spectacles
- Soft materials aid compatibility with respirators and other items of PPE
- UV and IR radiation protection
- High degree of mechanical strength



|          |  |  |
|----------|--|--|
| Art. no. | 9302.043   | 9302.045   |
| Colour   | green/black                                      | green/black                                      |
| Lens     | PC clear/UV 2-1,2<br>uvex supravision HC-AF      | PC clear/UV 2-1,2<br>uvex supravision HC-AF      |
| Flip-up  | PC grey<br>welding shade 3<br>uvex infradur PLUS | PC grey<br>welding shade 5<br>uvex infradur PLUS |



|                             |  |  |
|-----------------------------|--|--|
| Replacement lens<br>flip-up | Art. no. 9302.083                                | 9302.085   |
| Lens                        | PC grey<br>welding shade 3<br>uvex infradur PLUS | PC grey<br>welding shade 5<br>uvex infradur PLUS |



## uvex ultravision · 9301

- Comfortable welding goggles with wide field of vision
- Can be worn over most prescription spectacles
- Continuously adjustable water-repellent headband
- Outstanding close and pressure-free fit
- Ergonomic shape
- Sophisticated ventilation system ensures exceptional wearer comfort
- Lenses easily replaceable and spare lenses included

|          |   |
|----------|---|
| Art. no. | 9301.245  |
| Colour   | black   |
| Lens     | PC green<br>welding shade 5<br>uvex infradur PLUS |

|                  |   |
|------------------|---|
| Replacement lens | Art. no. 9301.285                                 |
| Lens             | PC green<br>welding shade 5<br>uvex infradur PLUS |



# Welding Protection

*uvex 9350 · Levels of welding protection*

## uvex · 9350



- Wide-vision welding goggles with flip-up filter holder
- Maximum wearer comfort through close-fitting frame
- Can be worn over most prescription spectacles
- Easily adjustable headband
- Indirect ventilation system
- Lens replacement possible

|          |                          |
|----------|--------------------------|
| Art. no. | 9350.035                 |
| Colour   | black                    |
| Lens     | CA clear                 |
| Flip-up  | black                    |
| Lens     | green<br>welding shade 5 |



|                                      |
|--------------------------------------|
| Replacement lenses for basic version |
| Art. no.                             |
| Lens                                 |

|                                |
|--------------------------------|
| Replacement lenses for flip-up |
| Art. no.                       |
| Lens                           |
| welding shade 5                |

## Levels of welding protection and recommendations for use according to EN 169

| LEVEL OF PROTECTION | USE  | GAS USED            | FLOW RATE (L/H)            |
|---------------------|--|---------------------|----------------------------|
| 1.7                 | Protection against scattered rays for welding assistants | –                   | –                          |
| 2                   | Lightweight oxyacetylene cutting                         | –                   | –                          |
| 3                   | Lightweight oxyacetylene cutting                         | –                   | –                          |
| 4                   | Welding and braze welding                                | Acetylene           | < 70                       |
| 5                   | Welding and braze welding<br>Oxyacetylene cutting        | Acetylene<br>Oxygen | 70 – 200<br>900 – 2,000    |
| 6                   | Welding and braze welding<br>Oxyacetylene cutting        | Acetylene<br>Oxygen | 200 – 800<br>2,000 – 4,000 |

# Accessories

*uvex cleaning accessories*



## uvex cleaning station

- Plastic eyewear cleaning station for wall mounting
- Replaceable plastic pump
- Easy to use
  - Simple eyewear cleaning process
  - Increased safety through cleanliness
  - Extends life of eyewear
- Refillable with silicone-free cleaning tissues and uvex cleaning fluid

Art. no. 9970.002

Includes  
2 x 9971.000  
1 x 9972.100  
1 x 9973.100



**uvex 9973.100**

Plastic pump for uvex cleaning solution 9972.100.

Art. no. 9973.100



**uvex 9972.100**

0.5 l cleaning solution.  
Suitable for all lenses!

Art. no. 9972.100



**uvex 9971.000**

Refill pack of silicone-free cleaning tissues, approx. 700 sheets.  
Suitable for all lenses!

Art. no. 9971.000



## uvex Cleaning towelettes

- 100 per box
- Silicone-free
- Not anti-static
- Individually wrapped – ideal for cleaning eyewear on the go
- For all uvex eyewear lenses

Art. no. 9963.000



Wall holder for cleaning towelettes including mounting accessories

Art. no. 9963.001



# Accessories

*uvex eyewear straps and uvex hang-cords*

## uvex eyewear headbands



### 9958.006

- Features a stopper for individual size adjustment
- Metal-free
- Suitable for uvex spectacles 9153 and 9159

Art. no. 9958.006



### 9958.003

- Continuously adjustable headband
- Metal-free
- Suitable for uvex overspecs 9165

Art. no. 9958.003



## uvex eyewear cord

### uvex 9959.002

Cord for all uvex spectacles

Art. no. 9959.002

for all uvex standard temples



### uvex 9959.003

Eyewear cord

- For all uvex duo-flex side arms
- For all soft temples (uvex skyper models)
- For 9161, 9162 and 9165 models

Art. no. 9959.003

for all uvex duo-flex and standard temples



## uvex pheos eyewear cord

Eyewear cord

- For uvex pheos/uvex pheos s 9192 models
- Metal-free
- Individual size adjustment

Art. no. 9959.004



see page 24

## uvex pheos headband

- Eyewear headband to attach to uvex pheos/uvex pheos s side arms
- Metal-free
- Individual size adjustment

see page 25

Art. no. 9958.020

Colour grey/black



# Accessories

## *uvex safety eyewear cases*

### **uvex spectacles case**



- Hard shell case with modern design
- Extremely robust construction protects from external impact
- Soft interior
- Belt buckle fastening
- Practical snap hook
- Specially designed for goggles with strong curvature (e.g. uvex i-vo)

Art. no. 9954.600  
Colour black



### **uvex spectacles case**

- Extremely robust case
- Reinforced zipper
- Belt loop
- Additional space for spare lenses
- Suitable for all uvex spectacles (except 9169)

Art. no. 9954.500  
Colour black



### **uvex spectacles case**

- Classic case with snap fastener
- Suitable for all uvex spectacles (except 9160, 9169, 9172, 9175, 9178)

Art. no. 9954.000  
Colour black



### **uvex goggles case**

- Goggle case with zipper and belt loop
- Extremely large, robust case
- Additional space for spare lenses
- Suitable for uvex goggles and spectacles

Art. no. 9954.501  
Colour black



# Accessories

*uvex safety eyewear cases*

## uvex spectacles case



- Flexible robust nylon case
- Case can be extended by zipper on side
- Suitable for all uvex spectacles

Art. no. 6118.002  
Colour black



## uvex safety eyewear case

### uvex 9954.355

- Elegant microfibre bag
- Suitable for all uvex spectacles

Art. no. 9954.355

Colour black  
for safety spectacles



### uvex 9954.360

- Elegant microfibre bag
- Suitable for uvex overspecs and goggles

Art. no. 9954.360

Colour black  
for goggles



## uvex SECU Box



- Hard shell case for wall mounting
- Suitable for uvex goggles and spectacles
  - 2 pairs of goggles, or
  - 3 pairs of spectacles, or
  - 1 pair goggles and 2 pairs of spectacles

Art. no. 9957.502  
Colour blue



# Safety Eyewear

## Overview

| Model | Name                | Product                                | Retail unit | Page  | uvex supravision HC-AF | uvex supravision performance | uvex supravision extreme | uvex supravision CR | uvex optidur NCH | uvex optidur 4C PLUS | ETC (extreme) | uvex AR (anti-reflective) | uvex varomatic | silver mirror | sky-orange mirror | blue mirror | uvex infadril AF | uvex infadril PLUS | CA uncoated | CA anti-fog | scratch-resistant | scratch-resistant + anti-fog | hardened glass |
|-------|---------------------|--|-------------|-------|------------------------|------------------------------|--------------------------|---------------------|------------------|----------------------|---------------|---------------------------|----------------|---------------|-------------------|-------------|------------------|--------------------|-------------|-------------|-------------------|------------------------------|----------------|
| 9104  | uvex 9104           | Safety spectacles – welding protection | 5           | 49    |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9116  | uvex 9116           | Safety spectacles – welding protection | 5           | 49    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9130  | uvex cosmoflex      | Plastic temple spectacles              | 5           | 35    |                        |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             | ■                 |                              |                |
| 9134  | uvex meteor         | Plastic temple spectacles              | 5           | 35    |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9137  | uvex ceramic        | Plastic temple spectacles              | 5           | 39    |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9148  | uvex 9148           | Metal temple spectacles                | 5           | 39    |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9149  | uvex 9149           | Metal temple spectacles                | 5           | 39    |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9153  | uvex racer MT       | Metal temple spectacles                | 5           | 38    |                        |                              |                          |                     |                  |                      |               | ■                         |                |               |                   |             |                  |                    |             | ■           |                   |                              |                |
| 9155  | uvex mercury        | Metal temple spectacles                | 5           | 39    |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9159  | uvex winner         | Metal temple spectacles                | 5           | 38    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    | ■           | ■           |                   |                              |                |
| 9160  | uvex i-vo           | Plastic temple spectacles              | 5           | 28    | ■                      |                              |                          | ■                   | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9160  | uvex i-vo           | Safety spectacles – welding protection | 5           | 47/48 |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9161  | uvex 9161           | Plastic temple spectacles              | 12          | 40    |                        |                              |                          | ■                   | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9162  | uvex 9162           | Safety spectacles – welding protection | 12          | 51    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9163  | uvex astroflex      | Plastic temple spectacles              | 5           | 32    | ■                      |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9164  | uvex astrospec 2.0  | Plastic temple spectacles              | 5           | 23    | ■                      | ■                            | ■                        | ■                   | ■                | ■                    | ■             | ■                         |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9165  | uvex ultraspec      | Plastic temple spectacles              | 5           | 40    |                        |                              |                          | ■                   | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9166  | uvex astrolite      | Plastic temple spectacles              | 5           | 32    |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9168  | uvex astrospec      | Plastic temple spectacles              | 5           | 32    | ■                      |                              |                          | ■                   | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9168  | uvex astrospec      | Safety spectacles – welding protection | 5           | 50    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9169  | uvex super OTG      | Plastic temple spectacles              | 5           | 41    | ■                      |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9169  | uvex super f OTG    | Plastic temple spectacles              | 5           | 41    |                        |                              |                          | ■                   |                  |                      | ■             |                           |                |               | ■                 |             |                  |                    |             |             |                   |                              |                |
| 9169  | uvex super f OTG    | Safety spectacles – welding protection | 5           | 47/49 |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 9169  | uvex super f OTG CR | Plastic temple spectacles              | 5           | 29/41 |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9172  | uvex super g        | Plastic temple spectacles              | 5           | 26    | ■                      |                              |                          | ■                   | ■                |                      |               |                           |                |               | ■                 |             |                  |                    |             |             |                   |                              |                |
| 9174  | uvex skylite        | Plastic temple spectacles              | 5           | 33    |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9175  | uvex skyguard NT    | Plastic temple spectacles              | 5           | 33    | ■                      |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9177  | uvex x-trend        | Plastic temple spectacles              | 5           | 33    | ■                      |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9178  | uvex super fit      | Plastic temple spectacles              | 5           | 26/27 | ■                      | ■                            |                          | ■                   | ■                | ■                    | ■             | ■                         | ■              |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9178  | uvex super fit      | Safety spectacles – welding protection | 5           | 47/48 |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             | ■                |                    |             |             |                   |                              |                |
| 9178  | uvex super fit CR   | Plastic temple spectacles              | 5           | 27/29 |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9180  | uvex futura         | Plastic temple spectacles              | 5           | 35    |                        |                              |                          |                     | ■                | ■                    |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9180  | uvex futura         | Safety spectacles – welding protection | 5           | 50    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 9182  | uvex futura         | Plastic temple spectacles              | 5           | 35    |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9185  | uvex athletic       | Plastic temple spectacles              | 5           | 36    |                        |                              |                          |                     | ■                | ■                    |               |                           |                |               |                   | ■           |                  |                    |             |             |                   |                              |                |
| 9185  | uvex athletic       | Safety spectacles – welding protection | 5           | 50    |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |

| Model | Name                       | Product                             | Retail unit | Page     | uvex supravision HC-AF | uvex supravision performance | uvex supravision extreme | uvex supravision CR | uvex optidur NCH | uvex optidur 4C PLUS | ETC (extreme) | uvex AR (anti-reflective) | uvex varomatic | silver mirror | sky-orange mirror | blue mirror | uvex infadrur AF | uvex infadrur PLUS | CA uncoated | CA anti-fog | scratch-resistant | scratch-resistant + anti-fog | hardened glass |
|-------|----------------------------|-------------------------------------|-------------|----------|------------------------|------------------------------|--------------------------|---------------------|------------------|----------------------|---------------|---------------------------|----------------|---------------|-------------------|-------------|------------------|--------------------|-------------|-------------|-------------------|------------------------------|----------------|
| 9188  | uvex cybric                | Plastic temple spectacles           | 5           | 37       |                        |                              |                          | ■ ■                 |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9188  | uvex cyberguard            | Plastic temple spectacles           | 5           | 37       |                        |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9190  | uvex i-3                   | Plastic temple spectacles           | 5           | 21       | ■ ■                    |                              |                          | ■ ■                 |                  |                      |               |                           | ■ ■ ■          |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9192  | uvex pheos/uvex pheos s    | Plastic temple spectacles           | 5           | 24       | ■ ■                    | ■ ■                          |                          |                     |                  |                      |               |                           |                | ■             |                   |             |                  |                    |             |             |                   |                              |                |
| 9192  | uvex pheos guard           | uvex pheos headband version         | 4           | 25       |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9195  | uvex skyper                | Plastic temple spectacles           | 5           | 30       | ■                      |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9196  | uvex skyper s              | Plastic temple spectacles           | 5           | 30       | ■                      |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9196  | uvex skybrite s            | Plastic temple spectacles           | 5           | 30       | ■                      |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9197  | uvex skyper sx2            | Plastic temple spectacles           | 5           | 31       | ■                      |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9197  | uvex skybrite sx2          | Plastic temple spectacles           | 5           | 31       | ■                      |                              |                          |                     |                  |                      |               |                           |                | ■             |                   |             |                  |                    |             |             |                   |                              |                |
| 9207  | uvex 9207                  | Clip-on – welding protection        | 10          | 51       |                        |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 9231  | uvex polavision            | Plastic temple spectacles           | 5           | 37       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             | ■           |                   |                              |                |
| 9301  | uvex ultravision           | Safety goggles                      | 10          | 44       | ■                      |                              |                          |                     | ■                |                      |               |                           |                |               |                   |             |                  |                    |             | ■           |                   |                              |                |
| 9301  | uvex ultravision faceguard | Safety goggles                      | 1           | 44       | ■                      |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9301  | uvex ultravision           | Safety goggles – welding protection | 10          | 52       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 9302  | uvex ultrasonic            | Safety goggles                      | 4           | 43       | ■                      | ■                            |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9302  | uvex ultrasonic flip-up    | Safety goggles – welding protection | 4           | 43/47/52 | ■                      |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    | ■           |             |                   |                              |                |
| 9302  | uvex ultrasonic CR         | Safety goggles                      | 4           | 29/43    |                        |                              |                          | ■                   |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9305  | uvex 9305                  | Safety goggles                      | 12          | 45       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■ ■                |             |             |                   |                              |                |
| 9306  | uvex HI-C                  | Safety goggles                      | 10          | 45       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 9307  | uvex carbonvision          | Safety goggles                      | 5           | 42       |                        |                              | ■                        |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9350  | uvex 9350                  | Safety goggles – welding protection | 10          | 53       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             | ■                 |                              |                |
| 9405  | uvex 9405                  | Safety goggles                      | 12          | 45       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  | ■                  |             |             |                   |                              |                |
| 6118  | uvex 6118                  | Safety eyewear case                 | 12          | 57       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9954  |                            | Safety eyewear cases                | 5           | 56       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9954  |                            | Microfibre case                     | 5           | 57       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9957  |                            | SECU box                            | 1           | 57       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9958  |                            | Headband for uvex temple spectacles | 10          | 55       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9959  |                            | Neck hang cord for uvex spectacles  | 10          | 55       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9963  |                            | Cleaning towelettes                 | 5           | 54       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9970  |                            | Cleaning station                    | 1           | 54       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9971  |                            | Replacement cleaning papers         | 1           | 54       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9972  |                            | Cleaning fluid                      | 1           | 54       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |
| 9973  |                            | Plastic pump                        | 1           | 54       |                        |                              |                          |                     |                  |                      |               |                           |                |               |                   |             |                  |                    |             |             |                   |                              |                |

# Applications

*Always the perfect solution*

 Mechanical risk

 Chemical risk

 Optical risk

| Working conditions   | Eyewear model            | Lens material  | Lens tinting                              | Coating  |
|--|--------------------------|----------------|---|--|
| Light and precision engineering                                    | Spectacles               | HG<br>PC       | clear                                     | uvex optidur 4C PLUS<br>uvex optidur NCH<br>uvex supravision HC-AF   |
| Assembly,<br>maintenance   | Spectacles               | HG<br>PC       | clear                                     | uvex optidur 4C PLUS<br>uvex optidur NCH<br>uvex supravision HC-AF   |
| Grinding,<br>angle grinding  | Spectacles,<br>Goggles   | HG<br>VG<br>PC | clear                                     | uvex optidur NCH<br>uvex supravision HC-AF<br>uvex supravision performance<br>uvex variomatic                                  |
| Turning<br>Milling   | Spectacles               | HG<br>PC       | clear                                     | uvex optidur 4C PLUS<br>uvex optidur NCH<br>uvex supravision HC-AF   |
| Dusty environments   | Goggles                  | PC             | clear                                     | uvex supravision HC-AF<br>uvex supravision extreme   |
| Foundry cleaning   | Goggles                  | PC             | clear                                     | uvex supravision HC-AF<br>uvex supravision extreme   |
| Forestry and agriculture   | Spectacles               | PC             | clear<br>amber                            | uvex supravision HC-AF<br>uvex supravision extreme   |
| Laboratory   | Spectacles<br>Goggles    | HG<br>PC       | clear<br>light blue                       | uvex optidur NCH<br>uvex supravision HC-AF<br>uvex optidur 4C PLUS   |
| Working with acids and galvanic media                              | Goggles                  | PC<br>CA       | clear                                     | uvex supravision HC-AF<br>uvex supravision extreme   |
| Spot welding,<br>soldering   | Spectacles,<br>Goggles   | G<br>PC        | welding shade green<br>welding shade grey | uvex infradur PLUS<br>uvex infradur AF   |
| Oxygene cutting<br>Gas welding, braze welding<br>Welders assistant | Spectacles,<br>Goggles   | G<br>PC        | welding shade green<br>welding shade grey | uvex infradur PLUS<br>uvex infradur AF   |
| Foundries  | Spectacles               | G<br>PC        | welding shade green<br>welding shade grey | uvex infradur PLUS<br>uvex infradur AF   |
| Furnaces   | Spectacles,<br>Goggles   | G<br>PC        | welding shade green<br>welding shade grey | uvex infradur PLUS<br>uvex infradur AF   |
| Outdoors – sunglare  | Spectacles               | PC             | grey<br>brown<br>silver mirror            | uvex supravision HC-AF<br>uvex supravision extreme<br>uvex supravision performance<br>uvex optidur 4C PLUS<br>uvex optidur NCH |
| Offshoring/maritime  | Spectacles               | PC             | uvex variomatic<br>uvex polavision        | uvex variomatic<br>uvex polavision   |
| Strong lighting,<br>glare,<br>mixed lighting                       | Spectacles               | PC             | clear<br>light blue                       | AR (anti-reflective)   |
| Sterile working conditions   | Spectacles,<br>Goggles   | PC             | clear                                     | uvex supravision CR  |
| Plant visitors   | Spectacles,<br>Overspecs | PC             | clear                                     | uvex supravision HC-AF<br>uvex optidur 4C PLUS<br>uvex optidur NCH<br>uncoated   |